


**NOTES ON THE USE OF
THE WD-4800 ANTENNA DISTRIBUTOR**

Do not connect the WT-D5800 Digital Wireless Receiver to the WD-4800's DC power distribution output terminals. Connection of the unit could cause the WT-D5800's operation to become unstable, blow the WD-4800's fuse or cause other malfunctions.

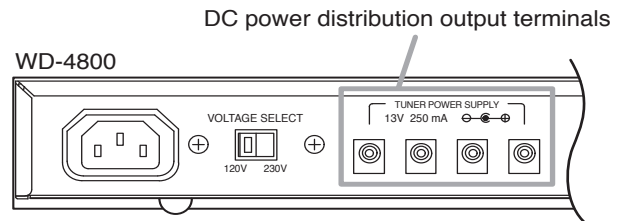

Further, take care to use only the channels from Banks 1 – 4 when using the digital wireless microphone system. Use of any channels from Banks A – F could cause signal interruptions due to radio interference or other malfunctions.