

INSTRUCTION MANUAL

HEADSET MICROPHONE


YP-M301

Thank you for purchasing TOA's Headset Microphone. Please carefully follow the instructions in this manual to ensure long, trouble-free use of your equipment.

1. GENERAL DESCRIPTION

The YP-M301 is a headset microphone designed to be exclusively used with an optional WM-2100 Portable Transmitter.

2. NOMENCLATURE

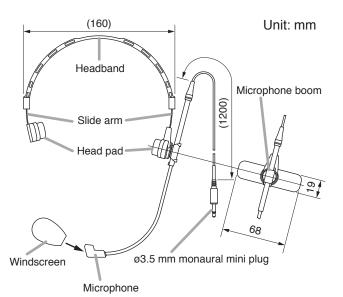

Note

Numerical values in parentheses are for reference only.

3. HOW TO USE

- Put on the headset and adjust the slide arms so that the head pads are positioned just over the ears.
- Adjust a microphone boom, and position the microphone (windscreen attached) at the mouth.
- Keep the microphone 3 5 cm away from the mouth when using.
- Speaking loud or positioning the microphone too close to the mouth could muffle sounds and make them inaudible.
- The headset is not recommended for use in aerobics or other vigorous performance applications.
- · Use the supplied case when storing the unit.

4. SPECIFICATIONS

Туре	Electret condenser type
Directivity	Unidirectional
Sensitivity	-44 dB (0 dB=1 V/Pa, 1 kHz)
Maximum Input Sound Pressure	115 dB SPL
Cord Length	1.2 m
Terminal	ø3.5 mm monaural mini plug
Finish	Headband: ABS resin, black
Weight	45 g (cable included)

Note: The design and specifications are subject to change without notice for improvement.

Accessories

Storage case	1
Windscreen (black)	2

TOA Corporation

URL: http://www.toa.jp/