

HEADSET MICROPHONES

WH-4000A WH-4000H

Thank you for purchasing TOA's Headset Microphone.
Please carefully follow the instruction in this manual to ensure proper use of your equipment.


This product is an expendable item. No warranty is provided for any trouble except incipient failure.

1. GENERAL DESCRIPTION


The TOA WH-4000A and WH-4000H are headset microphones of a cardioid pick-up pattern, featuring a lightweight design. Besides, the WH-4000A is equipped with an adjustable band to fix the headset on your head.

2. NOMENCLATURE

[WH-4000A]

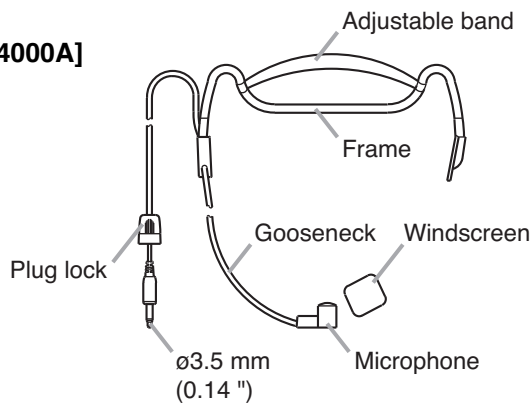


• Wearing the headset

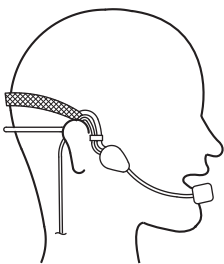

Position the adjustable band either above or below the frame to provide the greatest comfort and stability.

[WH-4000H]

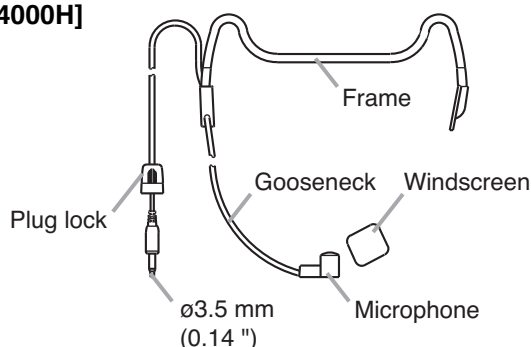

3. PRECAUTION

Be sure to keep the windscreen attached to the microphone while in use.
Doing otherwise allows sweat or spit to directly get into the microphone, possibly causing its failure.

4. HOW TO USE

- By adjusting the gooseneck, position the microphone with the supplied windscreen slightly off the front of your mouth, and 3 – 5 cm away from your mouth for the best sound reproduction. When the microphone is too close to your mouth or you speak too loud, speech clarity will be impaired, making it hard for the audience to hear announcements.
- Place the headset frame around the head so that the frame and adjustable band are horizontal across the back of the head and the ends of the frame fit over.

5. SPECIFICATIONS

Type	Electret condenser type
Directivity	Unidirectional
Sensitivity	-66 dB ± 3 dB (0 dB = 1 V/0.1 pa, 1 kHz)
Maximum Input Level	120 dB SPL
Cord Length	1.3 m (4.27 ft)
Terminal	ø3.5 mm (0.14 ") monaural plug
Finish	Adjustable band (WH-4000A only): EVA, black Frame: Stainless, black (silicon rubber) Gooseneck: Black (shrink tube)
Weight	50 g or 1.76 oz (cable included)

Note: The design and specifications are subject to change without notice for improvement.

URL: <http://www.toa.jp/>