

**SPEAKER MOUNTING BRACKETS**

**HY-CW1B  
HY-CW1W  
HY-CW1WP**

TOA's HY-CW1B, HY-CW1W and HY-CW1WP are designed to be used exclusively to mount the HX-5 series speaker system to a ceiling.

Both the HY-CW1B and the HY-CW1W are designed for indoor use, while the HY-CW1WP is designed for under-eave use. The speaker can be rotated 360° horizontally. It can also be tilted vertically up to 82.5° when suspended horizontally, and depending on the speaker directivity mode, up to 67.5° (for 60° mode) or 75° (for 15°, 30° or 45° mode) when suspended vertically.

**1. SAFETY PRECAUTIONS**

- Before installation or use, be sure to carefully read all the instructions in this section for correct and safe operation.
- Be sure to follow all the precautionary instructions in this section, which contain important warnings and/or cautions regarding safety.
- After reading, keep this manual handy for future reference.

**WARNING**

Indicates a potentially hazardous situation which, if mishandled, could result in death or serious personal injury.

- Install the unit only in a location that can structurally support the weight of the unit and the speaker. Doing otherwise may result in the speaker falling down and causing personal injury and/or property damage.
- (HY-CW1B and HY-CW1W only)  
Since the unit is designed for indoor use, do not install it outdoors. If installed outdoors, the aging of parts causes the unit to fall off, resulting in personal injury.
- Owing to the speaker's size and weight, be sure that at least two persons are available to install the speaker. Failure to do so could result in personal injury.
- Do not use other methods than specified to mount the bracket. Extreme force is applied to the unit and the speaker could fall off, possibly resulting in personal injuries.
- Use nuts and bolts that are appropriate for the ceiling structure and composition. Failure to do so may cause the speaker to fall, resulting in material damage and possible personal injury.
- Tighten each nut and bolt securely. Ensure that the bracket has no loose joints after installation to prevent accidents that could result in personal injury.
- Use the specified speaker in combination. Doing otherwise may cause the speaker to fall off, resulting in personal injury.
- Do not mount the unit in locations exposed to constant vibration. The mounting bracket can be damaged by excessive vibration, potentially causing the speaker to fall, which could result in personal injury.
- Avoid installing the speaker in locations close to the seashore or in indoor swimming facilities that are not well ventilated. In such locations the bracket may be vulnerable to corrosion, eventually allowing the speaker to fall resulting in personal injury.

**CAUTION**

Indicates a potentially hazardous situation which, if mishandled, could result in moderate or minor personal injury, and/or property damage.

- Avoid touching the unit's sharp metal edge to prevent injury.
- Do not hang down from the unit as this may cause it to fall down or drop, resulting in personal injury and/or property damage.
- Have the unit checked periodically by the shop from where it was purchased. Failure to do so may result in corrosion or damage to the unit that could cause the unit to fall, possibly causing personal injury.

**2. PRECAUTIONS WHEN INSTALLING THE HY-CW1WP**

- Only the HY-CW1WP can be installed under eaves.
- Only the HX-5B-WP and HX-5W-WP speakers can be installed under eaves.
- All speaker modules must point downward from the horizontal. Failure to do so could adversely affect their intended performance as a splash-proof speaker and their weather-resistant capabilities, leading to malfunction.
- When installing the HX-5B-WP or HX-5W-WP speaker outdoors, be sure to mount it under eaves wherever possible to prevent direct exposure to rain and wind. Failure to follow this instruction could cause the speaker to exceed its capabilities as a splash-proof speaker, potentially leading to malfunction.

**3. INSTALLATION**

**Step 1.** Mount the ceiling bracket to a ceiling.

**Note**  
Anchor bolts, nuts, and washers required for mounting are not supplied with the bracket.

**Step 2.** Turn nut A fully to the root of the speaker bracket bolt.

**Step 3.** Remove the vertical angle adjustment bolts (one each for left and right) and loosen the axis bolt and axis nut.

**WARNING**

Only loosen the axis bolt and axis nut; do not remove them as doing so may cause the speaker to fall, resulting in personal injury.

**Step 4.** Use the hex head bolts to attach the speaker bracket to the HX-5 series' rear plate.

**Step 5.** Lift the speaker and insert the speaker bracket bolt through the slot in the ceiling bracket.


**Step 6.** Fix the HX-5 series in the desired horizontal orientation and tighten nuts A and B.

**WARNING**


Tighten nut B so that the bolt head projects at least 3 mm (1/8") from the nut. Doing otherwise could allow the speaker to fall, resulting in personal injury.

**Step 7.** With the HX-5 series' vertical orientation set to the desired position, fix the vertical angle adjustment bolts (one each for left and right) to the speaker bracket.

**Step 8.** Retighten the axis bolt and axis nut.

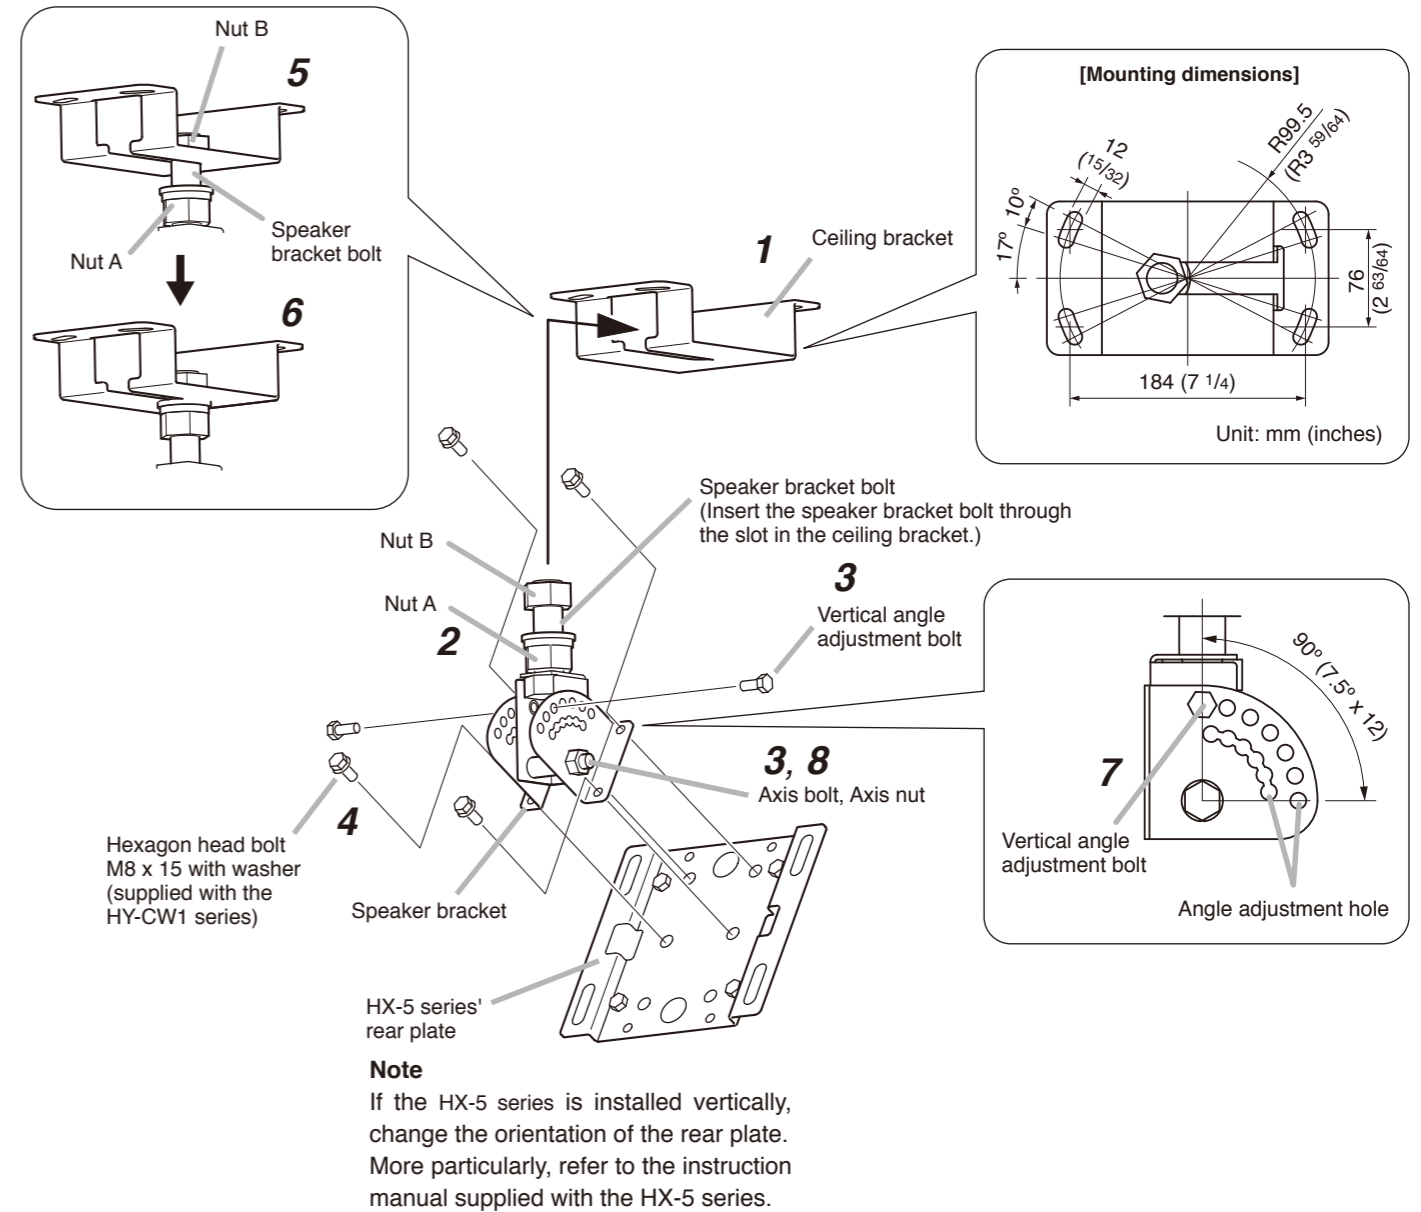

**4. FINISHED ASSEMBLY DIAGRAM**

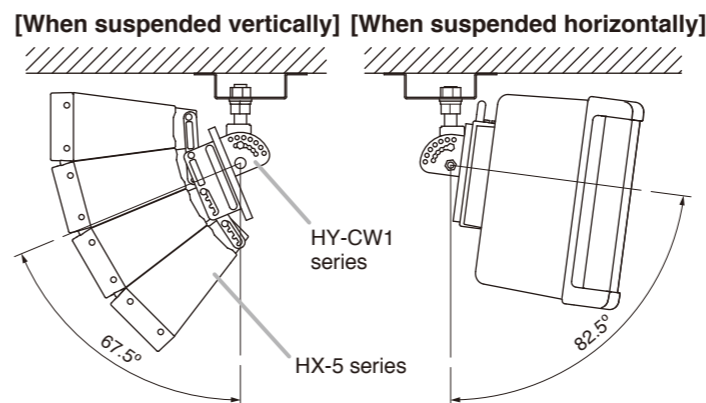

**5. SPECIFICATIONS**

The specifications of this product are available in TOA DATA Library (<https://www.toa-products.com/international/>). Scan the QR Code at right with your mobile phone camera to access the WEB site and search for this product number.



**Note:** "QR Code" is a registered trademark of DENSO WAVE INCORPORATED.

- **Accessories**  
Hexagon head bolt M8 x 15 (with washer) ..... 4